
SLAB SCISSOR LIFTS



- Self-propelled electric micro scissor lifts
- Compact and nimble
- Drives through a standard doorway
- 0.81m wide model rated for outdoor use
- Easy to use and maintain

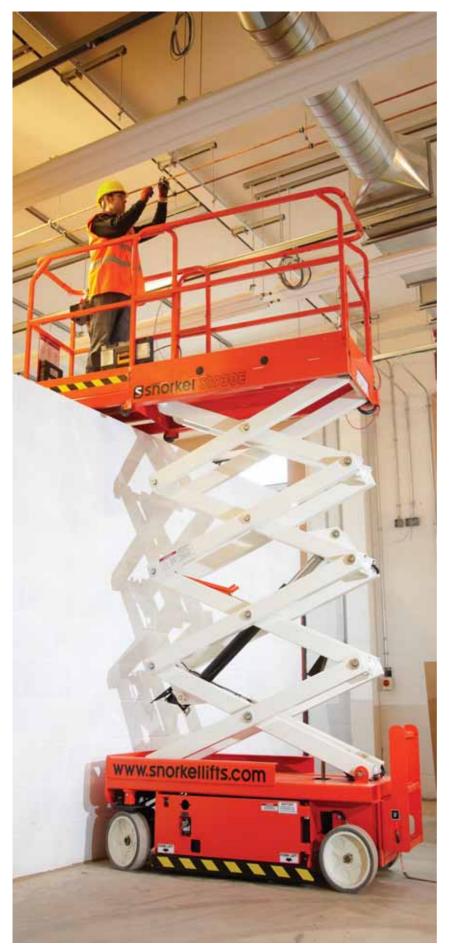

SLAB SCISSOR LIFTS

DIMENSIONS	\$1930E	\$1932E
Max. working height	7.6m	7.6m
Max. platform height (A)	5.6m	5.6m
Platform size (stowed)	0.64 x 1.56m	0.64 x 1.56m
Platform size (extended)	0.64 x 2.44m	0.64 x 2.44m
Deck extension length	0.88m	0.88m
Overall width (D)	0.76m	0.81m
Overall length (C)	1.85m	1.85m
Stowed height (B)	2.17m	2.17m
Min. height (guardrails folded)	1.90m	1.90m
Wheelbase	1.37m	1.37m
Ground clearance (stowed)	63mm	63mm
Ground clearance (elevated)	19mm	19mm

PERFORMANCE		
Platform capacity (SWL)	227kg	227kg
Max. operating wind speed (1 person on platform)	Om/s	12.5m/s
Max. drive height	5.6m	5.6m
Max. drive speed (stowed)	3.2km/h	3.2km/h
Max. drive speed (elevated)	0.6km/h	0.6km/h
Raise/lower time	20/26 seconds	20/26 seconds
Gradeability	25%	25%
Inside turning radius	0.13m	0.13m
Outside turning radius	1.64m	1.64m
Tyres	305mm x 102mm non-marking solid rubber	
Controls	proportional	proportional
Drive system	2 wheel drive	2 wheel drive


POWER

Power source	4 x 6V 220 amp hour batteries
Charger	90 - 240V, 25 amp


1,600kg

WEIGHT

TURNING RADIUS

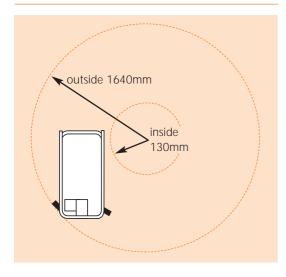

S1930E/1932E

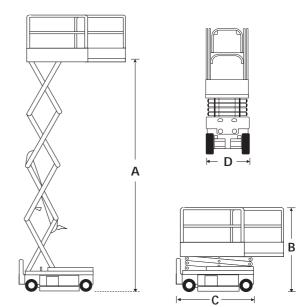

STANDARD FEATURES

- Pothole protection system •
- Non-marking tyres •
- Proportional controls •
- 0.8m extension deck •
- Power line to platform (no sockets) •
- Approved for outdoor use with one person on platform (S1932E only)
- Swing-out service trays •
- Folding guardrails •
- Horn •
- Hour meter •
- 2° level sensor with drive/lift interlock •
- CE approved •

OPTIONS

1,570kg

- Special paint colours
- Flashing amber beacon
- 110V AC 800W inverter or generator
- Dual lanyard anchorage point •



Washington, Tyne & Wear, NE38 9DA, U.K.

t: +44 (0) 845 1550 057 e: sales@snorkellifts.com

Specifications subject to change without notice. Photos and diagrams in this brochure are for promotional purposes only. Refer to appropriate Snorkel operators manual for detailed instructions on the proper use and maintenance.